

► **To modify the Auto Dial feature**

Programming memory buttons on set (by end user)

Follow these steps:

- 1-** PRESS "FEATURE" * 1
- 2-** DISPLAY "COMP AUTO EXT" (external auto dial)
- 3-** PRESS THE KEY YOU WANT TO PROGRAM
- 4-** DIAL THE EXTERNAL NUMBER. ENTER ALL 10 DIGITS
(REMEMBER TO DIAL 9 AND 1 IF A LONG DISTANCE NUMBER)
- 5-** PRESS "HOLD" OR "OK" TO STORE THE NUMBER IN MEMORY.