 



 




 
 


 



 


 

 
 
► Storing Names and Numbers in the System Directory

Any number stored in the system directory can be dialled automatically from any handset that is linked to the system.

Storing a number

 PROGRAM		 Mot de passe	
Press PROGRAM	Dial **	Enter the password (1234)	Dial 001
	 Auto Dial n°	 telephone n°	
Press Next	Enter the Auto Dial n° (00-99)	Enter the telephone n° (maximum de 24 chiffres)	
 AUTO DIAL STORE		 HOLD	 PROGRAM
Press AUTO DIAL / STORE	Conformation Tone	Press HOLD	Press PROGRAM

Storing a name

 PROGRAM		 Mot de passe	
Press PROGRAM	Dial **	Enter the password	Dial 002
	 Auto Dial n°	 Name	
Press Next	Enter the Auto Dial n° (00-99)	Enter the name (maximum de 10 chiffres)	
 AUTO DIAL STORE		 HOLD	 PROGRAM
Press AUTO DIAL / STORE	Conformation Tone	Press HOLD	Press PROGRAM